

U-TOPIC

AUTO LOCKING MODULE




CONTENT

1	Auto locking module	2
2	Scope of delivery	2
3	Mounting	3
4	Function of the Auto Locking Module	4
6	Coupling of the Auto Locking Module with the Smart Lock	5
7	Locking the door	6




1. AUTO LOCKING MODULE

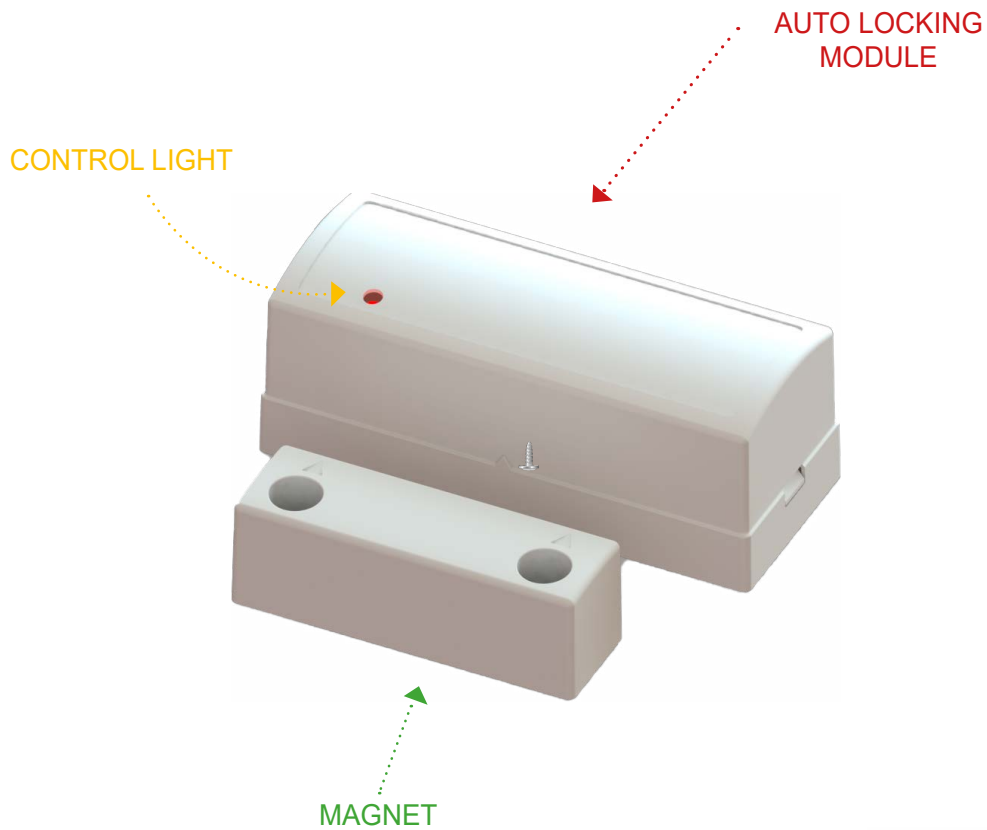

2. SCOPE OF DELIVERY

- 1 auto locking module (2,4 x 6,4 x 2,2 cm / W x L x D)
- 1 magnet (1,4 x 4,5 x 1,4 cm / W x L x D)
- 1 x 3.6V lithium battery 1/2 AA
- Double adhesive tape

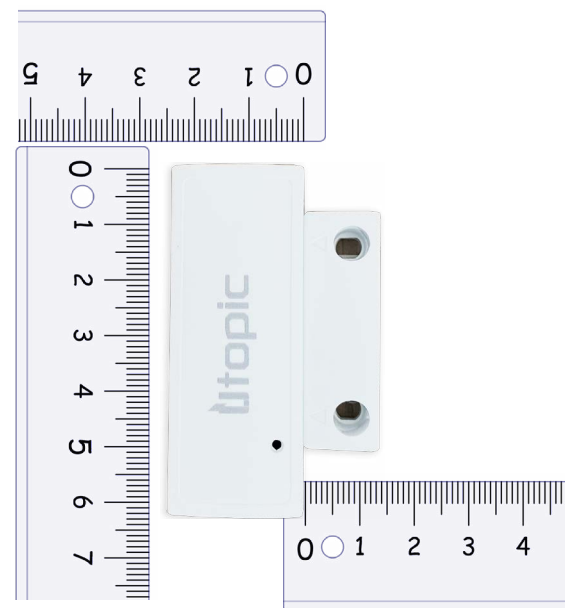



3. MOUNTING OF THE AUTO-LOCKING MODULE

- The module is attached to the door frame with double-sided adhesive tape
- The magnet is fixed on the door with double-sided adhesive tape
- Please make sure that the magnet and the module are fixed in the center of each other and that they form one unit when the door is closed (see picture on the right)
- It does not matter whether you align the two components at the top or bottom of the butt-closing door (= flush with the wall/surface)



Module and magnet must be arranged centrally!



Magnet and module can be mounted on top....




... or below (of course, a central arrangement is also possible)




- With rebated doors, the door leaf rests on the frame. In this case, the module must be mounted on the door frame and the magnet must be mounted on the outside of the door leaf

DOOR LEAF BUTT

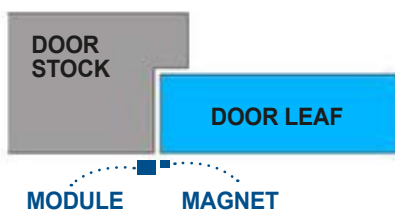

DOOR LEAF REBATED

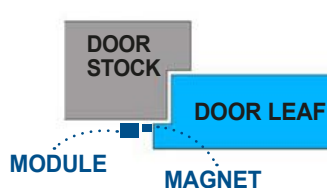




4. WHAT IS THE FUNCTION OF THE AUTO LOCK MODULE?

The Auto Locking Module is an accessory for the Ütopic motor cylinder that automatically locks the door 5 seconds after closing. This ensures a much higher level of security.

The magnet is always mounted on the door leaf, while the Auto Locking Module is mounted on the door frame. As soon as the door closes, both components must be flush and centered to each other. Otherwise, the circuit is interrupted and the system cannot function!

As soon as the door is closed, both components meet each other. The Auto Locking Module sends a radio signal to the ÜTopic after 5 seconds with the command to lock the door. This then closes the door completely.

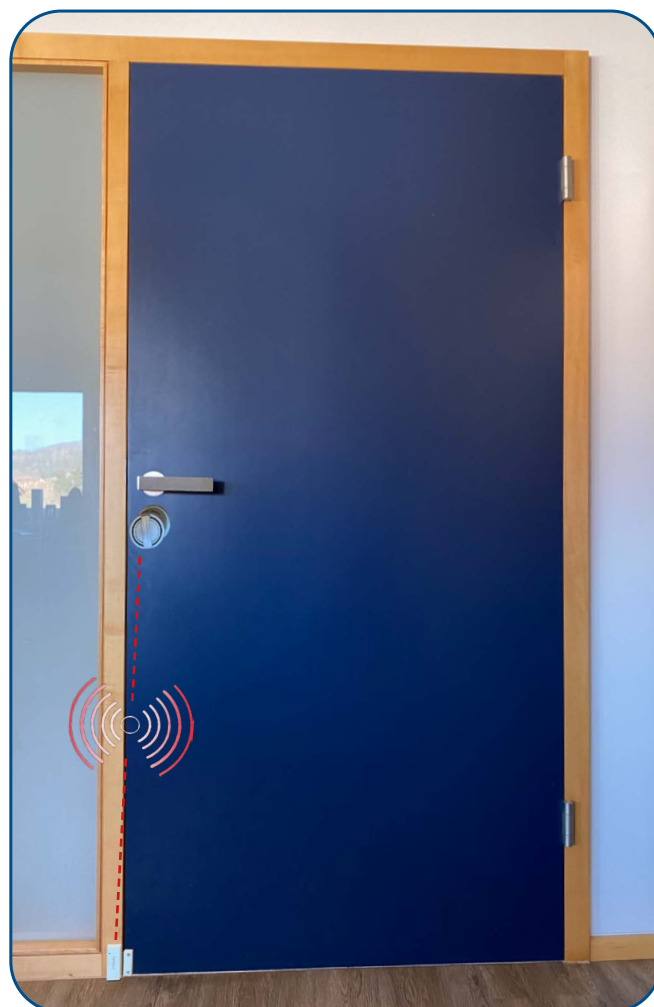

The module sends a radio signal to the ÜTopic with the command to lock the door as soon as the door is closed and the module and magnet are facing each other

The ÜTopic locks the door completely






5 COUPLING THE AUTO LOCKING MODULE WITH THE SMART LOCK

- Proceed as follows to pair the auto locking module with the Smartlock ÜTopic and the APP (the installation and pairing of the ÜTOPIC with the APP must already have taken place! If not, first follow the steps in the ÜTOPIC operating instructions!):


PROCEDURE ADMINISTRATOR IN THE APP

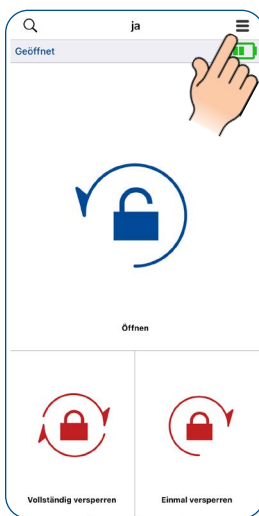


Open the ÜTOPIC APP, pair it with the Smartlock and click on the menu in the upper right corner (3 lines)



Then click on USER below

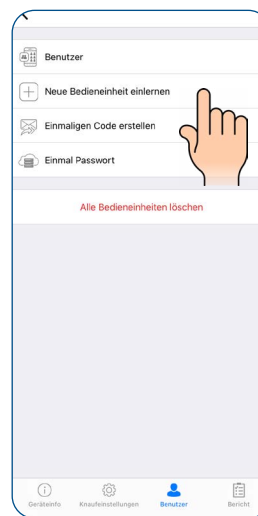

Select the second item LEARN NEW OPERATOR UNIT

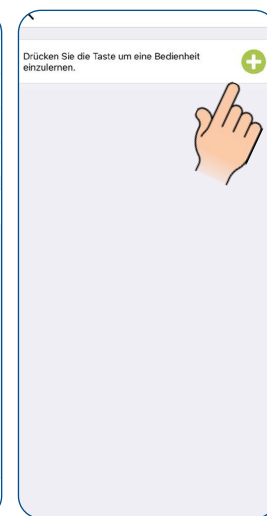

Click on the green plus at the top right. The SmartLock emits a long (5 sec.), then a short warning tone

- Now take the Auto Locking Module to hand

PROCEDURE ON THE AUTO LOCKING MODULE



Remove the magnet from the module for 3 seconds



Then bring the magnet back near the module



The LED light will flash after 5 seconds. As soon as you hear several warning tones, the Smart Lock ÜTopic and the Auto Locking module are successfully paired



6 LOCKING THE DOOR



Close the door

After 5 seconds the door locks automatically